 


# Numark®

*Professional Disc Jockey Products*

## DM925 DJ MIXER

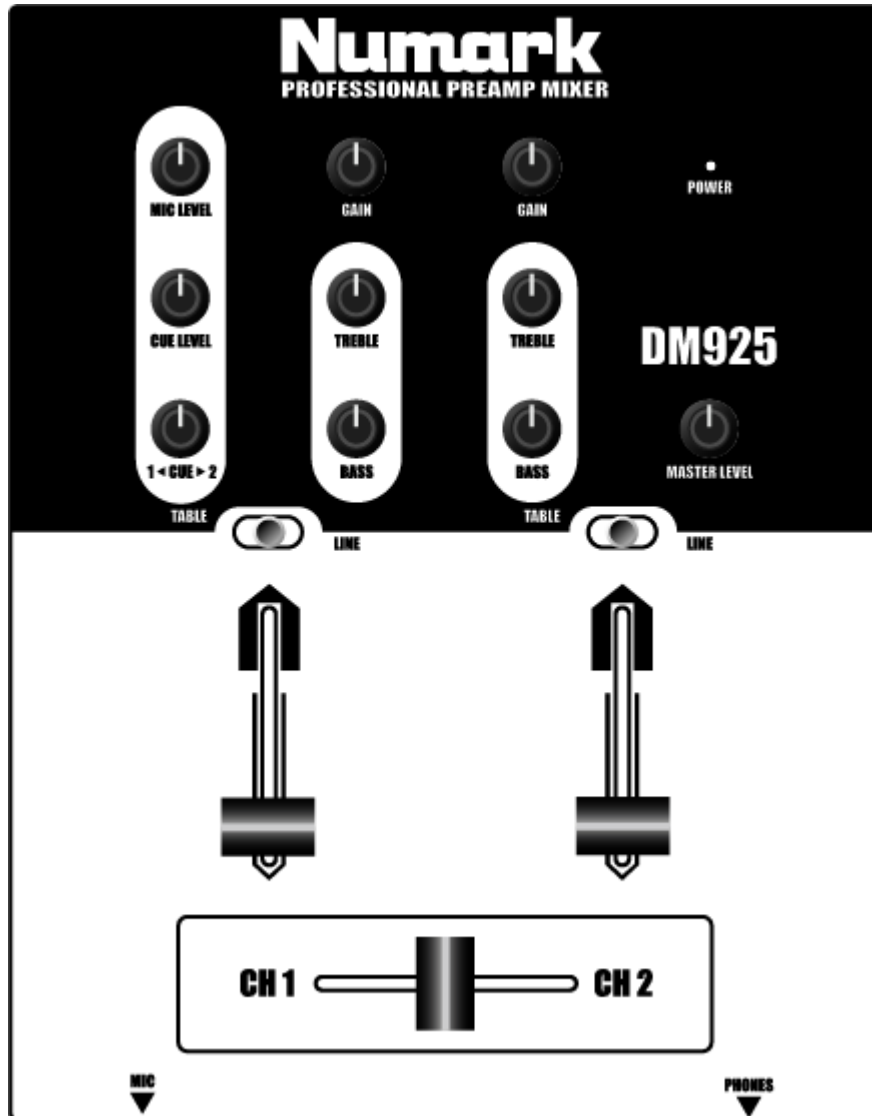

## Owner's Manual

**SAFETY INFORMATION**

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CAUTION**

FOR USA & CANADIAN MODELS ONLY  
TO PREVENT ELECTRIC SHOCK DO NOT USE  
THIS (POLARIZED) PLUG WITH AN EXTENSION  
CORD, RECEPTACLE OR OTHER OUTLET  
UNLESS THE BLADES CAN BE FULLY INSERTED  
TO PREVENT BLADE EXPOSURE.

**SAFETY INSTRUCTIONS**

- Read Instructions** - All the safety and operating instructions should be read before this product is connected and used.
- Retain Instructions** - The safety and operating instructions should be kept for future reference.
- Heed Warnings** - All warnings on this product and in these operating instructions should be followed.
- Follow Instructions** - All operating and other instructions should be followed.
- Water and Moisture** - This product should be kept away from direct contact with liquids.
- Heat** - Avoid placing this product too close to any high heat sources such as radiators.
- Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation opening; or, placed in a built-in installation, such as bookcase or cabinet that may impede the flow of air through the ventilation openings.
- Power Sources** - This product should be connected to a power supply only of the type described in these operating instructions, or as marked on the unit.
- Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked upon or pinched by items placed on or against them. When removing the cord from a power outlet be sure to remove it by holding the plug attachment and not by pulling on the cord.
- Object and Liquid Entry** - Take care that objects do not fall into and that liquids are not spilled into the inside of the mixer.
- Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- Non-use Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for long periods of time.
- Damage Requiring Service** - Only qualified personnel should service this product. If you have any questions about service please contact Numark at the number(s) shown on the back cover of this manual.
- Grounding or Polarization** - Precautions should be taken so that the grounding or polarization means built into the CD player is not defeated.
- Internal/External Voltage Selectors** - Internal or external voltage selector switches, if any, should only be reset and re-equipped with a proper plug for alternative voltage by a qualified service technician. Do not attempt to alter this yourself.
- Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer of the cart or stand for this purpose. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
- Do not defeat the safety purpose of the polarized-type plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Only use attachments/accessories specified by the manufacturer.


**Please read this entire manual before connecting this unit to your system**

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE ANY COVER. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL ONLY.**

The lightning flash with arrowhead symbol within the equilateral triangle is intended to alert the user to the presence of un-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying this appliance.

**SERVICE INSTRUCTIONS**

- Disconnect power cord before servicing
- Replace critical components  only with factory parts or recommended equivalents
- For AC line powered units - Before returning repaired unit to user, use an ohmmeter to measure from both AC plug blades to all exposed metallic parts. The resistance should be no more than 100,000ohms.

**For optimum performance:**

- The crossfader is a user replaceable item and subject to wear. Excessive force can wear out the fader quickly. **This is not a warranted item.**
- Never use spray cleaners on the slide controls. Residues cause excessive dirt build-up and this will void your warranty. In normal use slide controls can last for many years. If they malfunction (usually because of a dirty or dusty environment) consult a professional technician.
- Always make sure that AC power is OFF while making any connections.
- Use appropriate cables throughout your system. Do not use excessively long cables (i.e. over 50ft/14m) Be sure plugs and jacks are tightly mated. Loose connections can cause hum, noise or intermittents that could easily damage your speakers. Make the input and output connections with readily available low-capacitance stereo cables. Quality cable makes a big difference in audio fidelity and punch. See your Numark dealer or an electronics or audio specialist store if you are not sure which cables to get.
- ALWAYS remember: "TURN AMPS ON LAST AND OFF FIRST". Begin with master faders or volume controls on minimum and the amplifier gain/input control(s) down. Wait 8 to 10 seconds before turning up the volume. This prevents transients which may cause severe speaker damage.
- Use restraint when operating controls. Try to move them slowly. Rapid adjustments could damage speakers due to amplifier clipping.
- Avoid amplifier "clipping" at all costs: this occurs when the red LEDs (usually on the front panel of most professional power amplifiers) start flashing. "Clipping" is when the power amplifier is distorting and

---

working beyond it's limits. Amplifier distortion is THE major cause of speaker failure.

# Numark® DM925

## PROFESSIONAL DJ MIXER

### CONGRATULATIONS!

You have purchased the DM925 Stereo Mixer by **Numark**. This mixer was developed by DJs for you combining requested features in an easy to understand layout. Using the latest in circuit design technology and our history of award winning development experience you can expect years of reliable service from this product.

We hope you enjoy the **Numark** experience.

*Thank you for purchasing NUMARK products!*

### *FEATURES...*

 
 
- Compact design
- User replaceable crossfader
- 2 phono, 2 line, 1 microphone input
- Gain, Treble, and Bass Controls on Channels
- Powerful stereo headphone output
- Selectable fader cueing
- High-end performance audio signal

---

### TABLE OF CONTENTS

<b>Safety Measures</b>	2
<b>Introduction</b>	3
<b>Description of the Features</b>	4
<b>Quick Setup Diagram</b>	6
<b>Specifications</b>	7
<b>Warranty</b>	8
<b>Registration</b>	8




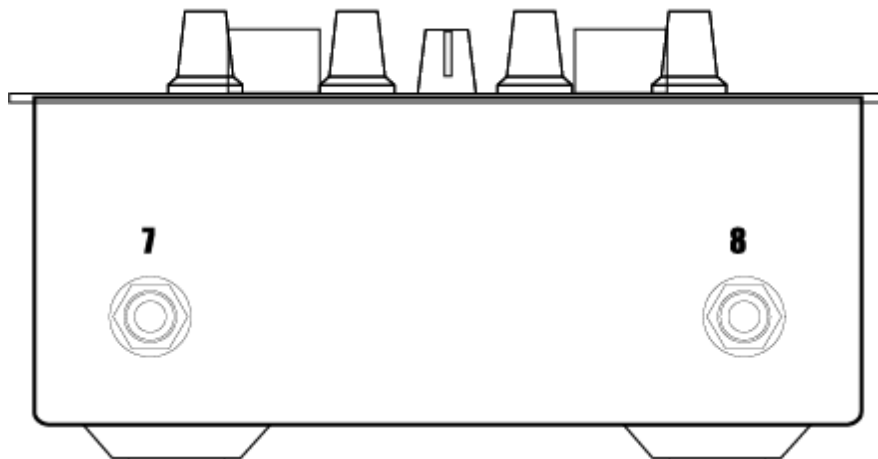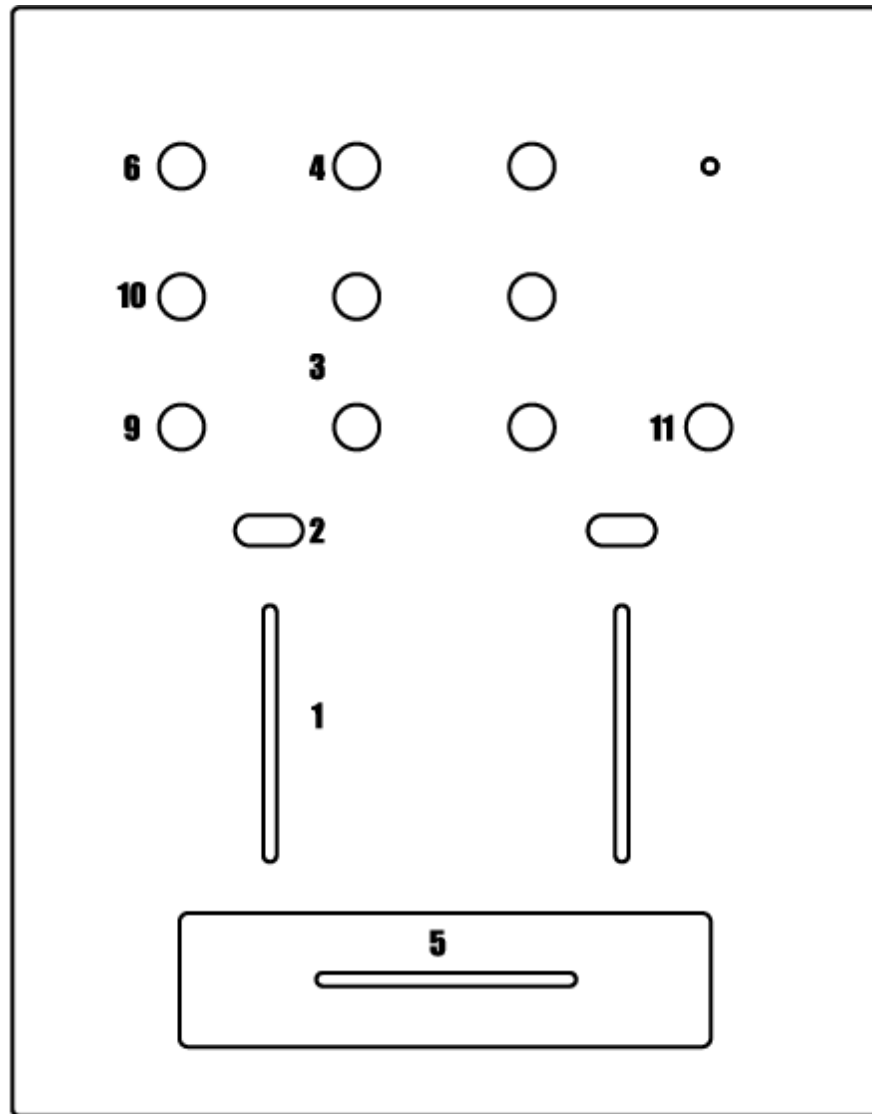

## MIXER FEATURES

1. **Input fader** - Controls individual source levels in the mix.
2. **Input toggle switch** - Selects which source will be active based on what you have connected to the rear panel input section.
3. **Treble and Bass EQ** - Adjusts the high and low frequency levels of the input channels for good sound.
4. **Channel Gain** – Adjusts the pre-fader volume for cleaner sound.
5. **Replaceable Crossfader** - Achieves clean segues between the two input channels. "Hard left" selects Channel 1. "Hard right" selects Channel 2. With the crossfader centered, both assigned channels are live. Use the crossfader for fast and seamless segues from one selected channel to the other.  
*Note: The crossfader is user replaceable in case of failure. Simply unscrew the two large screws which hold it in place, lift it out and disconnect it's cable. Re-attach the new crossfader and screw the mounting plate back onto the unit - you're back in business!*
6. **Mic Input Gain** – Adjusts microphone level.
7. **Mic Input** – Insert your Microphone with ¼" plug in here.
8. **Headphone Input** – Insert in the ¼" plug for your headphones here.
9. **Channel Cue** - Used to preview channel audio to your headphones. Listen here before bringing up channel faders or moving the crossfader.
10. **Headphone Level** – Adjusts cue volume.
11. **Master Fader** - Controls the overall output level.

 
## REAR PANEL

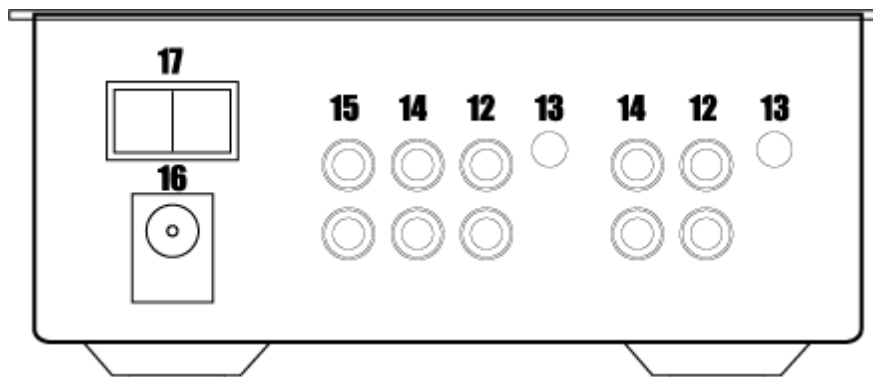

12. **Phono Inputs** – Plug your turntables in here. When these connectors are used, your signal is fed directly to the high-quality RIAA phono pre-amplifiers. Use this position only for turntables. Line level sources will overload the sensitive phono pre-amps and will cause distortion.
13. **Ground** - Grounding lug for turntable connection. Always use this connection when using turntables. (your turntable cable should have a grounding wire)
14. **Line Inputs** - Unbalanced RCA jacks for connecting stereo audio from line level sources such as CD players, HiFi VCRs, cassette and reel-to-reel tape decks, DAT machines, laser discs, tuners, even synthesizers or other mixing consoles.  
*NOTE: Plug mono audio sources into both Left and Right inputs using a "Y" cable connector.*
15. **Stereo Main Outputs** - Unbalanced RCA connectors controlled by the Master fader.
16. **Power Connector** - Plug in power adapter here and check the voltage level to match your country's standard.
17. **Power Switch** – turns unit off and on.

**QUICK SETUP DIAGRAM**

 Study this setup diagram. Make sure all faders are at "zero" and all devices are off. First, connect all input sources and processors. Next, connect your microphone and monitor headphones. Finally, connect the stereo outputs to the power amplifier(s) and/or audio receivers such as tape decks. Plug your mixer into AC power. Now you are ready to switch everything on. **IMPORTANT:** Always switch on your audio input sources such as turntables or CD players first, then your mixer, and finally any amplifiers. When turning off, always reverse this operation by turning off amplifiers, then your mixer, and then input devices.

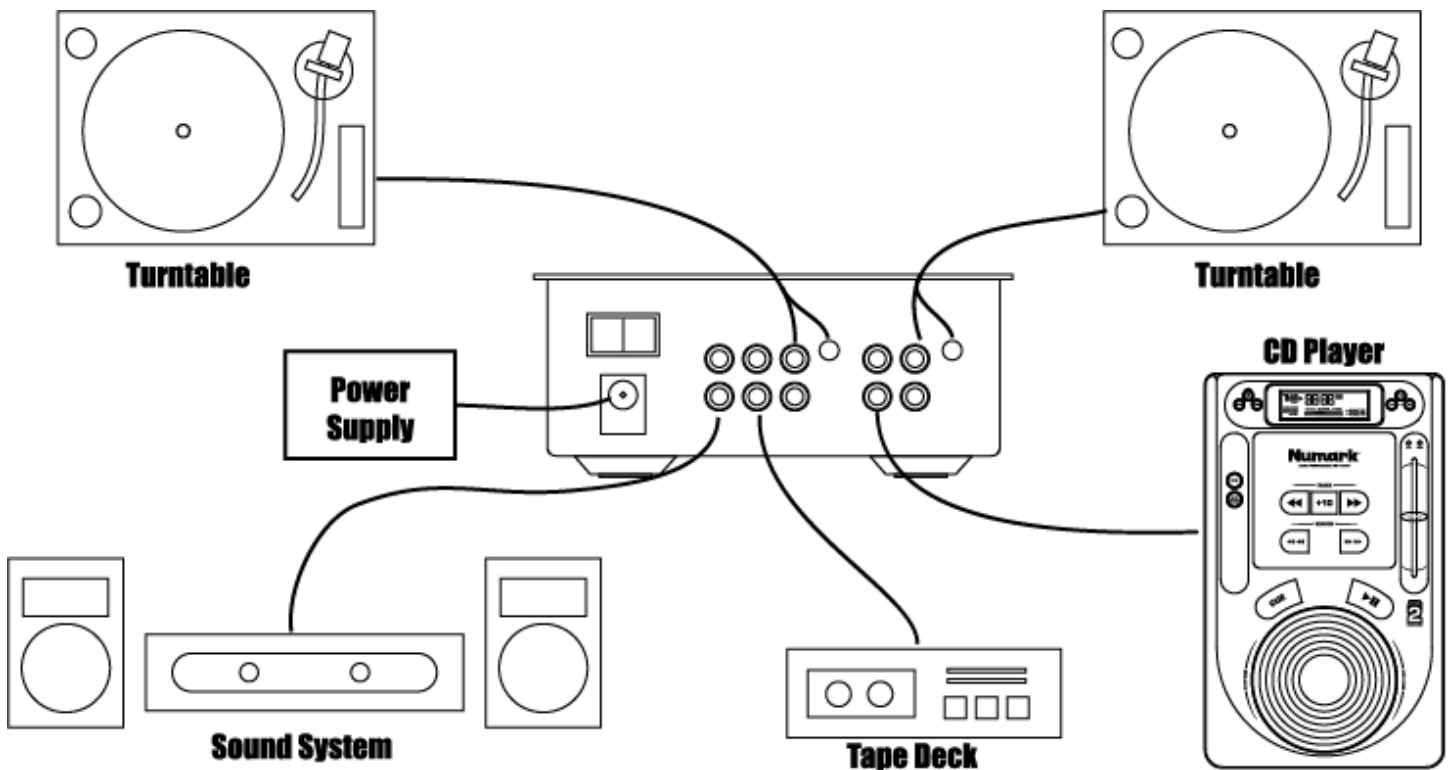



## **SPECIFICATIONS**

**SENSITIVITY OF INPUT (LEVEL/IMPEDANCE):**

LINE	-14dB/12K OHM	±3dB
PHONO	-50dB /47K OHM	±3dB
MIC	-54dB /3K OHM	±3dB

**OUTPUT (LEVEL/IMPEDANCE):**

MASTER (RCA)	0dB/47K OHM	±3dB
PHONES (LOAD=32 OHM)	-3dB/33K OHM	±3dB

**MAX. OUTPUT (LOAD=47K, THD=5%)**

MASTER (RCA)	MORE THAN 18dB (8V)
PHONES (LOAD=32 OHM)	MORE THAN 6dB (2V)

**CHANNEL BALANCE**                      **WITHIN 3dB**

**FREQUENCY RESPONSE:**

LINE	20-20KHz	±2dB
PHONO	20-20KHz	+2, -3dB (RIAA)
MIC	20-20KHz	+2/-3, +2/-8dB

**OUTPUT NOISE (IEC-A WEIGHTED)**

LINE	LESS THAN -75dB
PHONO	LESS THAN -65dB
MIC	LESS THAN -55dB

**TOTAL HARMONIC DISTORTION:**

MASTER OUTPUT (LOAD=47K OHM)	LESS THAN 0.2%
PHONES OUT (LOAD=32 OHM)	LESS THAN 0.3%

**CROSSTALK**                              **MORE THAN 50dB AT 1KHz BETWEEN L AND R CHANNEL.**

**EQUALIZER:**

LOW	+15 /-22dB	±3dB AT 70Hz
HI	+15 /-19dB	±3dB AT 13KHz

**POWER SOURCE**                      **AC 10V**

**DIMENSIONS**                          **236 (W) X 192 (D) X 82 (H) mm**

**WEIGHT**                                **2.8Kgs**

# Numark®

## Professional Disc Jockey Products

### LIMITED PRODUCT WARRANTY

What is covered and for how long?

1. NUMARK INDUSTRIES LCC ("NUMARK") warrants to the original purchaser that NUMARK products; including but not limited to DJ mixer, amplifiers, CD players, CD Mix Stations, turntables, preamplifiers, beatkeepers, equalizers, microphones, headphones, cartridges, and all other accessories; are to be free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase from an authorized NUMARK dealer for a period of (1) Year.

What is not covered? This Limited Warranty is conditioned upon proper use of the product by the purchaser.

2. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abuse, neglect, unusual physical or electrical stress, modification of any part of the product, or cosmetic damage; (b) equipment that has the serial number removed or made illegible; (c) all plastic surfaces and other externally exposed parts that are scratched or damaged due to normal use; (d) defects or damage from improper testing, operation, maintenance, installation, adjustment, or service of the mixer; (e) crossfaders.
3. What are NUMARK'S obligations? During the applicable warranty period, NUMARK will repair or replace, at NUMARK'S sole discretion, without charge to the purchaser, any defective component part of the mixer. To obtain service under this Limited Warranty, purchaser must first contact NUMARK and obtain a return authorization number ("RA#"). Purchaser must then return the mixer to NUMARK in an adequate container for shipping, accompanied by purchaser's sales receipt or comparable proof of sale showing the date of purchase, the serial number of the product, and the seller's name and address. To obtain an RA# and assistance on where to return the mixer, contact NUMARK customer service at 401-295 9000. Upon receipt, NUMARK will repair or replace the defective products. NUMARK may, at NUMARK'S sole discretion, use rebuilt, reconditioned, or new parts or components when repairing any product or replace a product with a rebuilt, reconditioned or new product. Repaired mixer will be warranted for a period equal to the remainder of the original Limited Warranty on the original mixer or for (90) days, whichever is longer. All replaced parts, components, boards and equipment become the property of NUMARK. If NUMARK determines that any mixer is not covered by this Limited Warranty, purchaser must pay all parts, shipping, and labor charges for the repair or return of such mixer.
4. What are the limits on NUMARK'S liabilities? THE WARRANTIES GIVEN IN THIS LIMITED WARRANTY, TOGETHER WITH ANY IMPLIED WARRANTIES COVERING NUMARK MIXER, INCLUDING WITHOUT LIMITATION ANY WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, NUMARK SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, CONSEQUENTIAL, INDIRECT OR SIMILAR DAMAGES, LOSS OF PROFITS, DAMAGES TO PURCHASER'S PROPERTY, OR INJURY TO PURCHASER OR OTHERS ARISING OUT OF THE USE, MISUSE OR INABILITY TO USE ANY NUMARK MIXER, BREACH OF WARRANTY, OR NEGLIGENCE, INCLUDING BUT NOT LIMITED TO NUMARK'S OWN NEGLIGENCE, EVEN IF NUMARK OR ITS AGENT HAS BEEN ADVISED OF SUCH DAMAGES, OR FOR ANY CLAIM BROUGHT AGAINST PURCHASER BY ANY OTHER PARTY. THIS LIMITED WARRANTY IS THE COMPLETE WARRANTY FOR NUMARK'S MIXER, AND IS GIVEN IN LIEU OF ALL OTHER EXPRESS WARRANTIES. THIS LIMITED WARRANTY SHALL NOT EXTEND TO ANYONE OTHER THAN THE ORIGINAL PURCHASER OF THIS PRODUCT AND STATES PURCHASER'S EXCLUSIVE REMEDY. IF ANY PORTION OF THIS LIMITED WARRANTY IS ILLEGAL OR UNENFORCEABLE BY REASON OF ANY LAW, SUCH PARTIAL ILLEGALITY OR UNENFORCEABILITY SHALL NOT AFFECT THE ENFORCEABILITY OF THE REMAINDER OF THIS LIMITED WARRANTY WHICH PURCHASER ACKNOWLEDGES IS AND WILL ALWAYS BE CONSTRUED TO BE LIMITED BY ITS TERMS OR AS LIMITED AS THE LAW PERMITS.
5. This Limited Warranty allocates risk of product failure between purchaser and NUMARK, and NUMARK'S product pricing reflects this allocation of risk and the limitations of liability contained in this Limited Warranty. The agents, employees, distributors, and dealers of NUMARK are not authorized to make modifications to this Limited Warranty, or make additional warranties binding on NUMARK. Accordingly, additional statements such as dealer advertising or presentation, whether oral or written, do not constitute warranties by NUMARK and should not be relied upon.
6. How does state law apply to this warranty? SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO PURCHASER.
7. This Limited Warranty gives you specific legal rights. You may also have other rights, which vary from one jurisdiction to another.

#### RETURN INFORMATION

- a) A Return Authorization number must be obtained from Numark through the address or phone numbers below.
- b) A copy of the original sales receipt must also be included for the equipment to be repaired under warranty.
- c) The faulty equipment must be packed in its original packaging.
- d) One additional outer layer of packaging must be included to ensure product safety. Failure to do so may inadequately protect the equipment in transit and, therefore, jeopardize the customer's warranty.
- e) Numark will not accept COD shipments and no call tags will be issued for merchandise return.
- f) Numark will not return repaired merchandise to customers by priority service, unless by written request at the customer's cost. Requests must be submitted in writing with merchandise returned.
- g) The defective Numark equipment should be sent, FREIGHT PREPAID with Return Authorization number clearly printed on the outer packaging and original sales receipt enclosed to:

**Numark** INDUSTRIES

Attention: Service Department  
11 Helmsman Avenue  
North Kingstown, RI 02852 USA

Phone: +1 (401) 295-9000  
Fax: +1 (401) 295-5200  
Web: [www.numark.com](http://www.numark.com)

### Product Registration

Please record the serial number of your unit as shown on the back of the chassis as well as the name of the dealer from whom you purchased the unit. Retain this information and your original purchase receipt for your records. Please return the enclosed warranty card to register your unit with us.

MODEL: \_\_\_\_\_

PURCHASED FROM: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_